


# APC PoE Injector (NBAC0303) Installation Instructions

## Overview

The APC Power-over-Ethernet (PoE) Injector provides power to a device through the Ethernet jack on the device.

The APC PoE Injector package includes the following items:

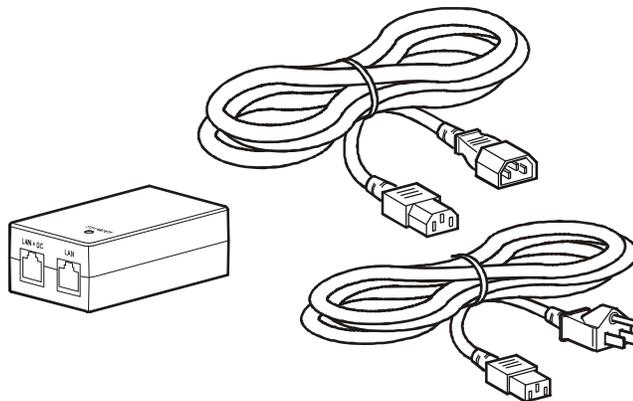

Quantity	Item
1	Power over Ethernet Injector Power Supply (100-250 VAC in, 48 VDC out)
1	Power Cord, 6 ft Black, IEC-320-C14 to IEC-320-C13, RoHS Compliant
1	Power Cord, 6 ft Black, NEMA 5-15P to IEC-320-C13, #14 AWG cord RoHS Compliant



## Status LED

The APC PoE Injector features a two-color status LED that monitors the current power mode.

Color	Status
Amber	Power On / Detection Mode
Green	Injecting Full Power / Power Up Mode

# Installation Instructions

1. Plug one end of an Ethernet cable into the Ethernet port of the appliance.
2. Plug the other end of the cable into the LAN - DC port on the injector.
3. Plug another Ethernet cable into the LAN port on the injector.
4. Plug the Ethernet cable into an Ethernet wall jack or hub.

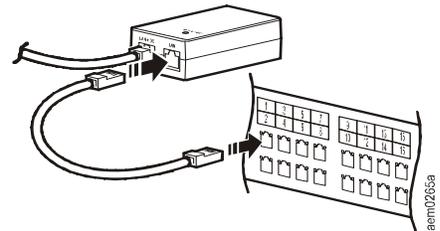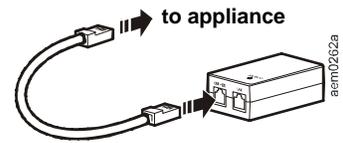

5. Connect the female end of the appropriate power cord to the power socket on the PoE injector.
6. Plug the male end of the appropriate power cord into a grounded power outlet.



Customer support and warranty information is available at the APC Web site, [www.apc.com](http://www.apc.com).

© 2008 American Power Conversion. All rights reserved. All APC trademarks are property of American Power Conversion. Other trademarks are property of their respective owners.

990-3370-001

06/2008

