

Installation Manual


NetBotz®

USB Coordinator & Router

NBWC100U

990-5333B-001

Publication Date: May 2017

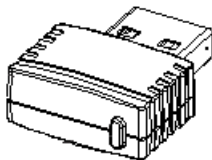

APC™

by **Schneider** Electric

Schneider Electric IT Corporation Legal Disclaimer

The information presented in this manual is not warranted by the Schneider Electric IT Corporation to be authoritative, error free, or complete. This publication is not meant to be a substitute for a detailed operational and site specific development plan. Therefore, Schneider Electric IT Corporation assumes no liability for damages, violations of codes, improper installation, system failures, or any other problems that could arise based on the use of this Publication.

The information contained in this Publication is provided as is and has been prepared solely for the purpose of evaluating data center design and construction. This Publication has been compiled in good faith by Schneider Electric IT Corporation. However, no representation is made or warranty given, either express or implied, as to the completeness or accuracy of the information this Publication contains.

IN NO EVENT SHALL SCHNEIDER ELECTRIC IT CORPORATION, OR ANY PARENT, AFFILIATE OR SUBSIDIARY COMPANY OF SCHNEIDER ELECTRIC IT CORPORATION OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS, CONTRACT, REVENUE, DATA, INFORMATION, OR BUSINESS INTERRUPTION) RESULTING FROM, ARISING OUT, OR IN CONNECTION WITH THE USE OF, OR INABILITY TO USE THIS PUBLICATION OR THE CONTENT, EVEN IF SCHNEIDER ELECTRIC IT CORPORATION HAS BEEN EXPRESSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SCHNEIDER ELECTRIC IT CORPORATION RESERVES THE RIGHT TO MAKE CHANGES OR UPDATES WITH RESPECT TO OR IN THE CONTENT OF THE PUBLICATION OR THE FORMAT THEREOF AT ANY TIME WITHOUT NOTICE.

Copyright, intellectual, and all other proprietary rights in the content (including but not limited to software, audio, video, text, and photographs) rests with Schneider Electric IT Corporation or its licensors. All rights in the content not expressly granted herein are reserved. No rights of any kind are licensed or assigned or shall otherwise pass to persons accessing this information.

This Publication shall not be for resale in whole or in part.

Contents

- Introduction. 1**
 - Document overview 1
 - Additional documentation 1
 - Supported appliances 2
 - Supported devices on the NetBotz wireless network 2
- Physical description. 3**
- Inventory 4**
- Components of the wireless sensor network 5**
- Installing the wireless sensor network. 6**
- Adding sensors to the wireless network 7**
- Positioning the USB Coordinator & Router 8**
- Powering the Coordinator 9**
 - Disconnecting a Coordinator 9
- Powering the Router 10**
- LED activity. 11**
 - Boot process 11
 - Coordinator LED activity 11
 - Router LED activity 11
- Using the reset button 12**
- Monitoring the USB Coordinator & Router 13**
 - Sensor listing 13
 - Receiving and sending data 13
- Updating the USB Coordinator & Router 14**
 - NetBotz v4.4.x and above 14
 - NetBotz Rack Monitor 250 only 14
- Cleaning the USB Coordinator & Router 14**

Specifications	15
Two Year Limited Factory Warranty	16
Obtaining service	18
Radio Frequency Interference	19
USA—FCC	19
Canada—ICES	19
European Union	19
Japan	20
Russia	20
Australia	20
Brazil	21

Introduction

The NetBotz® USB Coordinator & Router connects to a NetBotz appliance and allows you to monitor the temperature and humidity in your data center using the NetBotz Wireless Temperature Sensor (NBWS100T and NBWS100H).

Additionally, you can use a Wireless Sensor Pod 180 (NBPD0180) to monitor multiple temperature readings and rack door access.

The USB Coordinator & Router can be configured as the Coordinator or as a Router in your wireless sensor network. The USB Coordinator & Routers, and any End Devices in the network, are monitored by a single NetBotz appliance.

NOTICE: The USB Coordinator & Router requires a minimum of BotzWare v4.4 and NetBotz Advanced View v4.4. To upgrade, use the **Upgrade** icon in your NetBotz appliance Advanced View, or visit the APC web site.

ZigBee® Certified. The USB Coordinator & Router is ZigBee Certified. ZigBee is a wireless mesh networking standard for low-power applications. Schneider Electric is a member of the ZigBee Alliance.

Full information on the ZigBee standard can be found at the ZigBee Alliance website: <http://www.zigbee.org>.

Document overview

The *NetBotz USB Coordinator & Router Installation Manual* describes how to install the USB Coordinator & Router, and configure its settings. Specific instructions on installing other devices on the wireless sensor network are in the installation instructions for each device.

Additional documentation

Unless otherwise noted, the following documentation is available on the applicable product page on the APC Web site, **www.apc.com**. To quickly find a product page, enter the product name or part number in the Search field.

NetBotz Appliance User's Guide – Includes all details for using, managing, and configuring a NetBotz system with one of the following appliances: NetBotz Room Monitor 455 (NBWL0455, NBWL0456), NetBotz Rack Monitor 450 (NBRK0450), NetBotz Rack Monitor 550 (NBRK0550), NetBotz Rack Monitor 570 (NBRK0570). There is a separate user's guide for the NetBotz Rack Monitor 250 (NBRK0250).

Supported appliances

You can connect the USB Coordinator & Router to a wireless sensor network on any of the following appliances:

- NetBotz Rack Monitor 450 (NBRK0450)
- NetBotz Room Monitor 455 (NBWL0455, NBWL0456)
- NetBotz Rack Monitor 550 (NBRK0550)
- NetBotz Rack Monitor 570 (NBRK0570)
- NetBotz Rack Monitor 250 (NBRK0250)

The NetBotz Room Monitor 455, NetBotz Rack Monitor 250, 450, 550, and NetBotz Rack Monitor 570 appliances support a total of **48** wireless devices on the wireless sensor network.

In NetBotz versions prior to v4.5.3, the NetBotz Rack Monitor 450 appliance supports a total of **26** wireless devices on the wireless sensor network.

Supported devices on the NetBotz wireless network

The following wireless devices can be configured as a Coordinator or a Router:

Sensor Name	Range	Part Number
NetBotz USB Coordinator & Router	100 ft - line of sight	NBWC100U
NetBotz Wireless Sensor Pod 180 With the Rack Monitor 250, use as a Router only.	100 ft - line of sight	NBPD0180


The following wireless devices can be configured as an End Device: The range is

Sensor Name	Range	Part Number
NetBotz Temperature Sensor	100 ft - line of sight	NBWS100T NBWS100H
NetBotz Wireless Sensor Pod 180	100 ft - line of sight	NBPD0180

NOTICE: In a data center environment where obstructions are common, a range of 50 feet is typical.

NOTICE: Only the devices listed above are compatible with the USB Coordinator & Router. Other devices will not function and may damage the device.

Physical description

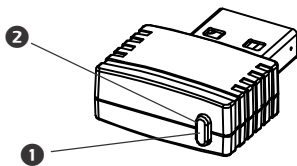


	Item	Description
1	Status LED	Signifies the mode and the current state of the USB Coordinator & Router
2	Reset button	Used to reboot the USB Coordinator & Router or reset it to factory defaults

Inventory

Inspect the contents of the package to ensure that the parts included match those shown below. Report missing or damaged contents to Schneider Electric or your reseller. However, if damage was due to shipping, immediately report the damage to the shipping agent.



The shipping and packaging materials are recyclable. Please save them for later use or dispose of them appropriately.

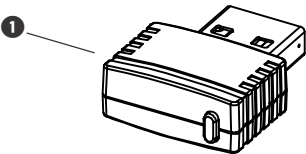

Item	Description
1	NetBotz USB Coordinator & Router
	AC-USB adapter (not shown)
	Literature kit (not shown)

Components of the wireless sensor network

The USB Coordinator & Router can be configured to act in two different modes on a wireless sensor network: Coordinator or Router. The mode of a USB Coordinator & Router is determined by how power is supplied to the device. The factory default is Router mode.

Host Appliance. A wireless sensor network is monitored by a single NetBotz appliance, listed in “Supported appliances” on page 2. The appliance collects data from the wireless sensor network, and generates alerts based on sensor thresholds.

The host appliance supports a total of **48** wireless devices on the wireless sensor network. For more information, see “Supported devices on the NetBotz wireless network” on page 2.

Coordinator. Each NetBotz host appliance and wireless sensor network must have one and only one Coordinator. The Coordinator is connected directly to the host appliance via USB. It reports data from the sensors on the network, and provides firmware updates to the wireless network, when available. Once it is connected to the appropriate USB Type A port on the NetBotz appliance, the USB Coordinator & Router is automatically configured as the Coordinator on your wireless sensor network.

Router. The factory default for the USB Coordinator & Router is Router mode. A USB Coordinator & Router configured as a Router extends the range of the wireless sensor network and passes information back and forth from the Coordinator to the End Devices, and from itself to the Coordinator. Routers are optional; in a data center environment where obstructions are common, Routers are recommended if sensors are more than 50 feet from the Coordinator.

A USB Coordinator & Router, or a Wireless Sensor Pod 180, powered by an AC-USB adapter, not attached to the NetBotz appliance, is automatically configured as a Router.

If a USB Coordinator & Router has previously been configured as a Coordinator, you must first reset it to factory defaults before powering it as a Router. See “Using the reset button” on page 12.

End Device. An End Device monitors attached and internal sensors and sends data back to the monitoring appliance through the network. A Wireless Temperature Sensor, or a Wireless Sensor Pod 180 powered by batteries, is automatically configured as an End Device.

For information about using the Wireless Temperature Sensor or the Wireless Sensor Pod 180 on your wireless network, see the installation manual that came with the product.

Installing the wireless sensor network

The order in which you power and configure your wireless network is important. For best results, power and configure your wireless network as follows:

Select the Coordinator and Routers. Choose the USB Coordinator & Router that will become the Coordinator. **Note the extended address of the Coordinator.** Choose one or more USB Coordinator & Routers to become Routers.

NOTICE: The NetBotz Rack Monitor 250 comes with the Coordinator connected to the Wireless port. The Coordinator is powered when the appliance is turned on.

Mount the sensors. Choose the locations for the Routers (USB Coordinator & Router or Wireless Sensor Pod 180) and End Devices (Wireless Temperature Sensor or Wireless Sensor Pod 180). **Do not power the Routers or End Devices at this time.**

Power the Coordinator. Power the Coordinator **FIRST**. Connect **one and only one** USB Coordinator & Router to a USB Type A port on the NetBotz appliance.

NOTICE: For the NetBotz Rack Monitor 250, use the Coordinator connected to the Wireless port. Do not connect an additional Coordinator.

Power the Routers. Power each Router using the included AC-USB adapter, not directly connected to the NetBotz appliance.

Power the End Devices. To power the Wireless Temperature Sensor, turn it on using the switch on its side. To power the Wireless Sensor Pod 180, insert the included batteries. To preserve battery life, do not power the End Devices until after the Coordinator and the Routers are powered.

For information about mounting and powering the Wireless Temperature Sensor or Wireless Sensor 180, see the manual that came with the device.

Adding sensors to the wireless network

Depending on the NetBotz appliance, you can add wireless sensors to the network in the following ways:

- Enter the MAC addresses for the wireless sensors manually.
- Use any barcode or QR code scanner to save a list of MAC addresses to a text file, one address per line, and copy and paste it into the sensor list.
- Use a hand-held USB scanner to manually scan the MAC address bar code on the USB Coordinator & Router label, or the QR code on the Wireless Temperature Sensor or Wireless Sensor Pod 180, directly into the sensor list.
- Once the Coordinator is connected to the appliance, allow powered wireless devices to automatically join and form the network using Auto Join.

NOTICE: Some bar code and QR code scanners return the part number, serial number, and MAC address on one line:

XN:NBWC100U%SN:XXXXXX123456%MAC:00C0B70000XXXXXX. To add a device to your wireless network, enter only the alphanumeric MAC address of each device.

For more information, see the documentation for your NetBotz appliance.

Positioning the USB Coordinator & Router

When you plan the sensor locations, be sure to place each USB Coordinator & Router within range of the Coordinator or another Router.

The maximum wireless range of the USB Coordinator & Router is 100 ft (line of sight). This range is a best-case scenario and the signal will be strongly affected by environmental interference.

In a data center environment where obstructions are common, Routers are recommended if sensors are more than 50 feet from the Coordinator.

The recommended minimum distance between wireless devices is 2 ft.

Use the RSSI sensor reading in the device's sensor listing to tune device placement.

See additional information on device placement in the APC Knowledge Base, <http://www.apc.com/support/answers.cfm>.

NOTICE: Install the USB Coordinator & Router in an environment compatible with the environmental specifications on page 15.

Powering the Coordinator

Power the Coordinator first. Connect one and only one Coordinator to a USB Type A port on the NetBotz Rack Monitor or Room Monitor appliance, or the Wireless port on the NetBotz Rack Monitor 250. The USB Coordinator & Router will be automatically configured as the Coordinator on your wireless sensor network.

Once the Coordinator is running, the other devices in the wireless sensor network will join the network automatically as long as their extended addresses are in the commission list, and they are powered.

To allow multiple wireless sensor networks to exist independently in the same area, the extended addresses in a commission list must not exist in another NetBotz appliance commission list.

Disconnecting a Coordinator

When you remove the Coordinator from the host appliance, all of the sensors on the wireless sensor network will go off line. When you reconnect the same Coordinator, the wireless network will restart, and the sensors on the network will begin reporting data again.

If you want to connect a different USB Coordinator & Router to the host appliance to become the Coordinator, you must **FIRST** remove the extended address of the previous Coordinator from the commission list. The sensor history of the devices in the wireless sensor network will not be affected.

Restarting the wireless network can take up to 20 minutes if a new channel is selected. The sensor pods will not report data during this time.

For more information, see the user's guide or online help for your NetBotz appliance.

Powering the Router

A USB Coordinator & Router must be connected to an AC-USB power source to become a Router. Once its extended address is added to the list in the user interface, and power is applied, it is automatically configured as a Router.

Do not use a NetBotz appliance as the USB power source for a Router device.

To configure a USB Coordinator & Router as a Router:

1. Add its extended address to the commission list in the user interface.
2. Plug it into the included AC-USB power source.

NOTICE: Do not power the Router from a USB port on a server or a device that may attempt enumeration.

LED activity

The LED on the USB Coordinator & Router flashes to indicate a certain status or alert.

Boot process

LED Activity	Meaning
Flashes a quick green, yellow, red sequence	Power on
Alternately flashes green and yellow for about 45 seconds	Runtime check
Flashes green three times	Check OK
Turns solid yellow for 5 seconds	Firmware update check
Flashes a quick green, yellow, green sequence	Application started

NOTICE: If the LED flashes red three times, then slowly flashes red, contact Technical Support.

After the boot process is complete:

Coordinator LED activity

LED Activity	Meaning
Flashing green	Normal status The network was formed successfully.
Off	Forming a network
Solid green	Joined another network as a Router.
Solid red	Unable to form a network due to wireless energy interference. Relocate the Coordinator.

Router LED activity

LED Activity	Meaning
Solid green	Normal Status - network present
Solid yellow	Searching for network
Off	The pod was previously configured as a Coordinator. Reset the sensor pod to factory defaults.

To limit traffic on the network, the Router will attempt to rejoin the network after waiting the following number of seconds: 5, 15, 30, 60, 120, 300.

If the attempts to rejoin the network fail, the Router will scan the network every 300 seconds + a random number of seconds. This additional random time prevents multiple Routers from attempting to connect at the same time.

Using the reset button

The reset button on the front of the USB Coordinator & Router is used to reboot it, or reset it to the factory default settings.

Reboot. When the reset button is given a short press (less than 3 seconds), the Status LED flashes green, and the sensor reboots with the current settings in place.

Reset to factory defaults. Press and hold the reset button for at least 5 seconds. The Status LED flashes green, and after about three seconds, changes to solid red until the button is released. The sensor will reset, erase its current settings, and restore the factory default settings.

NOTICE: During the initial 45-second startup time, the Reset button is disabled. Once startup is complete, the button functions normally.

Monitoring the USB Coordinator & Router

Once your wireless sensor network is installed and receiving power, you can begin monitoring your system using the software interface for the appliance.

See your appliance installation and quick configuration manual for system installation details and for instructions on accessing the software interface of the appliance.

Sensor listing

The following sensor is listed for the USB Coordinator & Router (Router mode only):

Sensor	Description
RSSI	The Received Signal Strength Indicator. This indicates the strength of the signal the Router receives from its parent (either another Router or the Coordinator). A reading above 30% RSSI is ideal.

Receiving and sending data

The USB Coordinator & Router passes data back and forth between the host appliance and any Routers or End Devices on the wireless sensor network as necessary.

If there is a significant change, each End Device sends its own data every 30 seconds. If there is no change, the End Device waits up to three (3) minutes before sending sensor data to indicate it is still alive.

End Devices do not extend the wireless network or pass data to other End Devices on the network.

Updating the USB Coordinator & Router

NetBotz v4.4.x and above

Firmware updates for the USB Coordinator & Router are included in the BotzWare firmware releases. When a BotzWare firmware update is available, you download it from the APC website and install it on the NetBotz appliance.

Once the BotzWare firmware update is applied, and the Coordinator receives the firmware update package from the NetBotz appliance, the other devices on the wireless network, including any USB Coordinator & Router, Wireless Temperature Sensor, and Wireless Sensor Pod 180 devices, receive the update package from the Coordinator over the wireless network.

When all the devices on the network have received the update package, the Firmware Update Available button is activated in the Wireless Sensor Setup task in the Advanced View. You click the button to reboot each device on the wireless network to apply the firmware update.

NOTICE: You can also use the NetBotz Wireless Firmware Update Utility available on apc.com to update the firmware on your wireless sensors.

NetBotz Rack Monitor 250 only

The NetBotz Rack Monitor 250 does not run BotzWare. To update the firmware for the USB Coordinator & Router and other wireless sensors on the Rack Monitor 250 wireless network, download the NetBotz Wireless Firmware Update Utility on apc.com.

Cleaning the USB Coordinator & Router

To clean the device, gently wipe surfaces with a clean, dry cloth.

Specifications

Electrical	
Input voltage, nominal	5V USB
Maximum total current draw	33mA USB
Physical	
Dimensions (H x W x D)	8.75 x 20.7 x 26.8 mm (0.34 x 0.81 x 1.05 in)
Shipping dimensions (H x W x D)	235.0 x 143.0 x 81.0 mm (9.2 x 5.6 x 3.2 in)
Weight	0.0032 kg (0.0071 lb)
with AC-USB adapter	0.069 kg (0.152 lb)
Shipping weight	0.145 kg (0.32 lb)
Environmental	
Elevation (above MSL)	
Operating	0 to 3000 m (0 to 10,000 ft)
Storage	0 to 15 000 m (0 to 50,000 ft)
Temperature	
Operating	0 to 45°C (32 to 113°F)
Storage	-15 to 65°C (5 to 149°F)
Humidity	
Operating	0 to 95%, non-condensing
Storage	0 to 95%, non-condensing
Compliance	
Immunity/Emissions	CE, EMC Directive 2004/108/EC, R&TTE Directive 1999/5/EC, Canadian ICES-003, US FCC 47 CFR Part 15

Two Year Limited Factory Warranty

Schneider Electric IT Corporation (SEIT), warrants its products to be free from defects in materials and workmanship for a period of two (2) years excluding the batteries. The SEIT obligation under this warranty is limited to repairing or replacing, at its own sole option, any such defective products. Repair or replacement of a defective product or parts thereof does not extend the original warranty period.

This warranty applies only to the original purchaser who must have properly registered the product within 10 days of purchase. Products may be registered online at warranty.apc.com.

SEIT shall not be liable under the warranty if its testing and examination disclose that the alleged defect in the product does not exist or was caused by end user's or any third person's misuse, negligence, improper installation, testing, operation or use of the product contrary to SEIT's recommendations or specifications. Further, SEIT shall not be liable for defects resulting from: 1) unauthorized attempts to repair or modify the product, 2) incorrect or inadequate electrical voltage or connection, 3) inappropriate on site operation conditions, 4) Acts of God, 5) exposure to the elements, or 6) theft. In no event shall SEIT have any liability under this warranty for any product where the serial number has been altered, defaced, or removed.

EXCEPT AS SET FORTH ABOVE, THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, APPLICABLE TO PRODUCTS SOLD, SERVICED OR FURNISHED UNDER THIS AGREEMENT OR IN CONNECTION HERewith.

SEIT DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTION AND FITNESS FOR A PARTICULAR PURPOSE.

SEIT EXPRESS WARRANTIES WILL NOT BE ENLARGED, DIMINISHED, OR AFFECTED BY AND NO OBLIGATION OR LIABILITY WILL ARISE OUT OF, SEIT'S RENDERING OF TECHNICAL OR OTHER ADVICE OR SERVICE IN CONNECTION WITH THE PRODUCTS.

THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES. THE WARRANTIES SET FORTH ABOVE CONSTITUTE SEIT'S SOLE LIABILITY AND PURCHASER'S EXCLUSIVE REMEDY FOR ANY BREACH OF SUCH WARRANTIES. SEIT WARRANTIES EXTEND ONLY TO ORIGINAL PURCHASER AND ARE NOT EXTENDED TO ANY THIRD PARTIES.

IN NO EVENT SHALL SEIT, ITS OFFICERS, DIRECTORS, AFFILIATES OR EMPLOYEES BE LIABLE FOR ANY FORM OF INDIRECT, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, ARISING OUT OF THE USE, SERVICE OR INSTALLATION OF THE PRODUCTS, WHETHER SUCH DAMAGES ARISE IN CONTRACT OR TORT, IRRESPECTIVE OF FAULT, NEGLIGENCE OR STRICT LIABILITY OR WHETHER SEIT HAS BEEN

ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. SPECIFICALLY, SEIT IS NOT LIABLE FOR ANY COSTS, SUCH AS LOST PROFITS OR REVENUE, WHETHER DIRECT OR INDIRECT, LOSS OF EQUIPMENT, LOSS OF USE OF EQUIPMENT, LOSS OF SOFTWARE, LOSS OF DATA, COSTS OF SUBSTITUANTS, CLAIMS BY THIRD PARTIES, OR OTHERWISE.

NOTHING IN THIS LIMITED WARRANTY SHALL SEEK TO EXCLUDE OR LIMIT SEIT'S LIABILITY FOR DEATH OR PERSONAL INJURY RESULTING FROM ITS NEGLIGENCE OR ITS FRAUDULENT MISREPRESENTATION OF TO THE EXTENT THAT IT CANNOT BE EXCLUDED OR LIMITED BY APPLICABLE LAW.

To obtain service under warranty you must obtain a Returned Material Authorization (RMA) number from customer support. Customers with warranty claims issues may access the SEIT worldwide customer support network through the SEIT Web site: www.apc.com. Select your country from the country selection drop down menu. Open the Support tab at the top of the web page to obtain information for customer support in your region. Products must be returned with transportation charges prepaid and must be accompanied by a brief description of the problem encountered and proof of date and place of purchase.

Obtaining service

To obtain support for problems with your NetBotz USB Coordinator & Router:

1. Note the serial number. The serial number is printed on the label on the back of the device.
2. Contact Customer Support using the information on the back cover of this manual. A technician will try to help you solve the problem by phone.
3. If you must return the product, the technician will give you a return material authorization (RMA) number. If the warranty expired, you will be charged for repair or replacement.
4. Pack the unit carefully. The warranty does not cover damage sustained in transit. Enclose a letter with your name, address, RMA number and daytime phone number; a copy of the sales receipt; and a check as payment, if applicable.
5. Mark the RMA number clearly on the outside of the shipping carton.
6. Ship by insured, prepaid carrier to the address provided by the Customer Support technician.

Radio Frequency Interference

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

USA—FCC

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC ID: SNSNBWC100U

Canada—ICES

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC: 3351C-NBWC100U

European Union

This product's transmitter is in conformity with the requirements of EU Council Directive 199/5/EC on the approximation of the laws of the Member States relating to Radio and Telecommunications Terminal Equipment (R&TTE). This product may cause radio interference in which case the user may be required to take adequate measures.

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. Schneider Electric cannot accept responsibility for any failure to satisfy the protection requirements resulting from an unapproved modification of the product.

Japan



This radio equipment is accredited in accordance with the Japanese Radio Law Article 38, Section 24(1).

工事設計認証書

Certificate of construction type

申請者	シュナイダーエレクトリック株式会社
特定無線設備の種別 Type of specified radio equipment	証明規則第2条第1項第19号の無線設備
電波の型式、周波数及び空中線電力 Types of radio wave, Frequency and Antenna power	G1D 2405~2475MHz (5MHz間隔 15波) 0.0007W
型式又は名称 Type of specified radio equipment	NetBotz Wireless Router and Coordinator
認証番号 The number of construction design certificate	010-100154
認証をした年月日 Date of certified	平成27年1月27日 27th January, 2015
備考 Remark	Model Name: NBWC100U

Russia



Australia





Agência Nacional de Telecomunicações

MODELO: NBWC100U

05272-16-10099

"Este equipamento opera em caráter secundário, isto é, não tem direito à proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário."

APC Worldwide Customer Support

Customer support for this product is available at no charge in any of the following ways:

- Visit the APC web site to access documents in the Knowledge Base and to submit customer support requests.
 - **www.apc.com** (Corporate Headquarters)
Connect to localized web sites for specific countries, each of which provides customer support information.
 - **www.apc.com/support/**
Global support searching the Knowledge Base and using e-support.
- Contact the Customer Care Center by telephone or e-mail.
 - Local, country-specific centers: go to **www.apc.com/support/contact** for contact information.

For information on how to obtain local customer support, contact the APC representative or other distributors from whom you purchased your APC product.

© 2017 Schneider Electric. APC, the APC logo, NetBotz, InfraStruxure, and NetShelter are owned by Schneider Electric Industries S.A.S., or its affiliated companies. All other trademarks are property of their respective owners.